


## IGNITION PULSE GENERATOR


### REMOVAL

Remove the lower cowl (page 2-3).  
Support the front end of the fuel tank (page 3-6).


Disconnect the ignition pulse generator 2P red connector.  
Release the wire from the wire clamp.

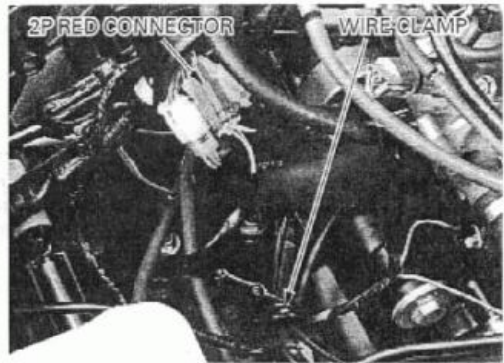

Remove the SH bolts and ignition pulse generator rotor cover.

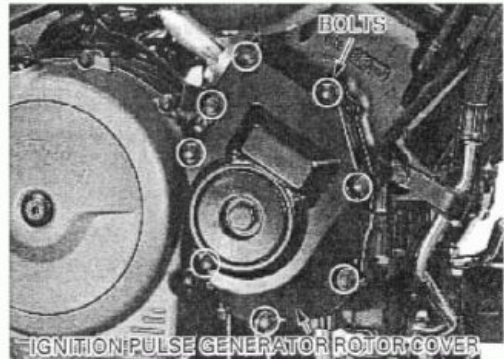

Remove the gasket and dowel pins.

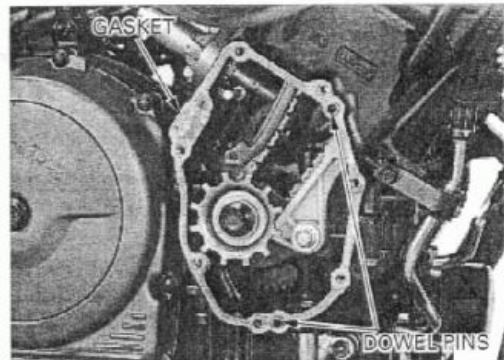

Remove the wire grommet from the cover.  
Remove the bolts and ignition pulse generator.

