

Check the O-ring is in good condition, replace if necessary.

Apply oil to the O ring and install the timing hole cap.



Tighten the timing hole cap to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m , 13 lbf·ft)

