

THERMO SENSOR/DIGITAL COOLANT GAUGE

NOTE

- The coolant temperature gauge is to be displayed only in a range from 35°C to 132°C (95°F to 270°F).
- When checking the digital coolant temperature gauge, always follow the steps in the troubleshooting chart below.

Coolant temperature	Displayed
Below 34°C (93°F)	— °C
35–121°C (95–250°F)	35–121°C
Above 122–132°C (252–270°F)	122–132°C Displayed figures blink and red line appears on the display.

Turn the ignition switch to "ON", but the digital coolant temperature gauge does not indicate

- Replace the sub fuse when the neutral indicator and side stand indicator does not operate

The digital coolant temperature gauge displayed "122–132°C" with figures blinking when the engine is cold

