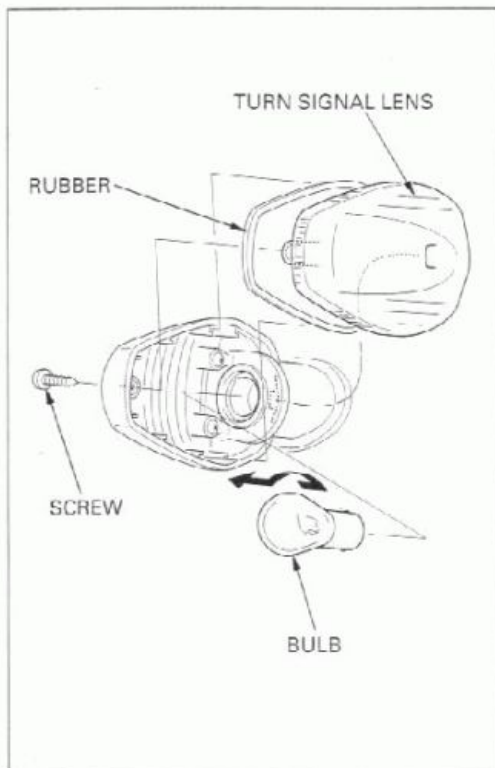


Rear (After '99:)

Remove the screw, turn signal lens and rubber.

While pushing in, turn the bulb counterclockwise to remove it and replace with a new one.


Install the rear turn signal in the reverse order of removal.

**REMOVAL/INSTALLATION**

For front turn signal unit removal, refer to rear view mirror removal (page 2-8).

For rear turn signal removal, remove the seat (page 2-2).

Disconnect the turn signal connectors.

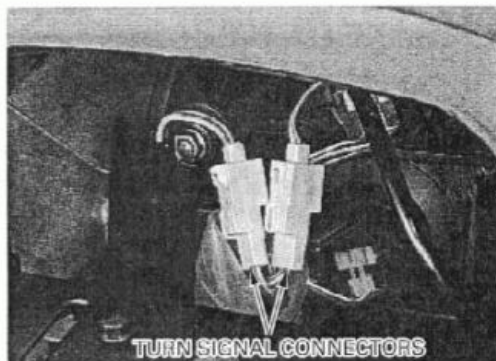

Remove the nut and setting plate.

Release the turn signal wire and remove the turn signal unit.

Route the turn signal wire properly (page 1-24).

Install the turn signal unit in the reverse order of removal.

