

If the fan motor starts, inspect the cooling fan relay continuity (page 19-24).


If the cooling fan relay is normal, replace the ECM.

If the fan motor does not start, inspect the cooling fan.

COOLING FAN INSPECTION

Remove the lower cowl (page 2-4).

Disconnect the cooling fan motor 2P natural connector.

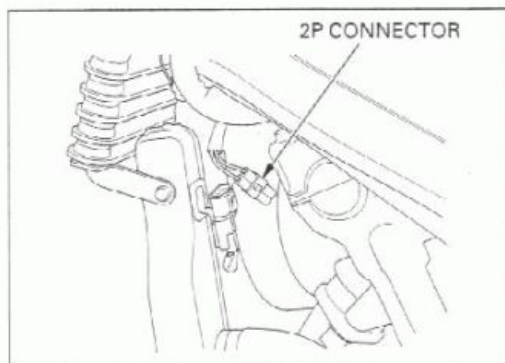


Measure the voltage at the cooling fan motor 2P natural connector wire harness side with the ignition switch turned to "ON".

Connection: Black/blue (+)–Black(–)

Standard: Battery voltage

If there is battery voltage, replace the cooling fan (page 19-24).

If there is no voltage, replace or repair the wire harness.

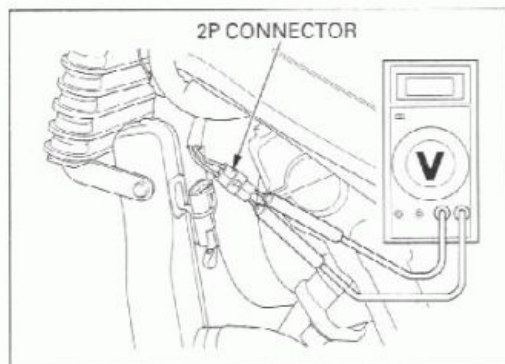

OIL PRESSURE SWITCH INSPECTION

If the oil pressure warning indicator stays on while the engine is running, check the engine oil level before inspection.

Make sure that the oil pressure warning indicator comes on with the ignition switch turned to "ON".

