

1. Short the black and gray terminals of the turn signal relay connector with a jumper wire. Start the engine and check that the turn signal light comes on when the switch is turned on.

Light comes on

Light does not come on

- Broken wire harness.

2. Check for continuity between the green terminal of the relay connector and ground.

Continuity

No continuity

- Broken ground wire.

- Faulty turn signal relay.
- Poor connection of the connector.