

AIR CLEANER	3-5	ENGINE OIL/OIL FILTER	3-17
AIR CLEANER HOUSING	5-65	ENGINE REMOVAL	7-2
ALTERNATOR/CHARGING COIL	16-10	ENGINE STOP RELAY	5-93
ALTERNATOR COVER INSTALLATION	10-8	EVAP PURGE CONTROL SOLENOID VALVE (CALIFORNIA TYPE ONLY)	5 95
ALTERNATOR COVER REMOVAL	10-2	EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE ONLY)	3-22
AUTOMATIC FIRST IDLE SYSTEM	21-1	FAST IDLE WAX UNIT	5-85
BANK ANGLE SENSOR	5-91	FLYWHEEL INSTALLATION	10-7
BARO/MAP SENSOR	5-87	FLYWHEEL REMOVAL	10-3
BALLANCER	12-14	FORK	13-16
BATTERY	16-6	FRONT BRAKE CALIPER	15-29
BODY PANEL LOCATIONS	2-0	FRONT FENDER	2-15
BRAKE FLUID	3-26	FRONT MASTER CYLINDER	15-16
BRAKE FLUID REPLACEMENT/AIR BLEEDING	15-5	FRONT WHEEL	13-9
BRAKE LIGHT SWITCH	3-29	FUEL CUT-OFF RELAY	5-60
BRAKE LIGHT SWITCH	19-32	FUEL LEVEL SENSOR/RESERVE SENSOR	19-27
BRAKE PAD WEAR	3-27	FUEL LINE	3-5
BRAKE PAD/DISC	15-12	FUEL LINE INSPECTION	5-55
BRAKE PEDAL	15-39	FUEL PUMP	5 58
BRAKE SYSTEM	3-27	FUEL TANK	5-61
CABLE & HARNESS ROUTING	1-24	GEARSHIFT LINKAGE	9-21
CAMSHAFT INSTALLATION	8 23	GENERAL SAFETY	1-1
CAMSHAFT REMOVAL	8-7	HANDLEBAR SWITCHES	19-31
CAM PULSE GENERATOR	5-88	HANDLEBARS	13-3
CAM CHAIN TENSIONER	8-30	HEADLIGHT	19-6
CHARGING SYSTEM INSPECTION	16-8	HEADLIGHT AIM	3-29
CLUTCH	9-13	HORN	19-34
CLUTCH FLUID	3-30	IAT SENSOR	5-88
CLUTCH FLUID REPLACEMENT/AIR BLEEDING	9-4	IGNITION COIL	17-6
CLUTCH MASTER CYLINDER	9-6	IGNITION PULSE GENERATOR	17 7
CLUTCH SLAVE CYLINDER	9-10	IGNITION SYSTEM INSPECTION	17-4
CLUTCH SYSTEM	3-30	IGNITION SWITCH	19-30
CLUTCH SWITCH	19 32	IGNITION TIMING	17-10
COOLANT REPLACEMENT	6-4	INJECTOR	5-76
COOLANT TEMPERATURE GAUGE/SENSOR ('99:)	19-19	KNOCK SENSOR	5-93
COOLANT TEMPERATURE SENSOR (AFTER '99:)	19-22	KNOCK SENSOR	21-2
COOLING FAN MOTOR INSPECTION (AFTER '99:)	19-24	LICENSE LIGHT	19-10
COOLING FAN MOTOR SWITCH ('99:)	19-23	LOWER COWL	2-3
COOLING SYSTEM	3-20	LUBRICATION SYSTEM DIAGRAM	4-0
COMBINATION METER ('99:)	19-11	LUBRICATION & SEAL POINTS	1-20
COMBINATION METER (AFTER '99:)	19-13	MAINTENANCE SCHEDULE	3 3
CRANKCASE COMBINATION	11-12	MODEL IDENTIFICATION	1-3
CRANKCASE SEPARATION	11-3	MUFFLER/EXHAUST PIPE	2-22
CRANKSHAFT	12 3	NEUTRAL SWITCH	19-32
CYLINDER COMPRESSION TEST	8-4	NUTS, BOLTS, FASTENERS	3-32
CYLINDER HEAD ASSEMBLY	8-20	O ₂ SENSOR (AFTER '99 CALIFORNIA TYPE ONLY)	5-96
CYLINDER HEAD COVER ASSEMBLY	8-27	OIL COOLER	4-13
CYLINDER HEAD COVER DISASSEMBLY	8-6	OIL PRESSURE SWITCH	19-26
CYLINDER HEAD COVER INSTALLATION	8-27	OIL PRESSURE INSPECTION	4-3
CYLINDER HEAD COVER REMOVAL	8-5	OIL PUMP	4-8
CYLINDER HEAD DISASSEMBLY	8-13	OIL STRAINER/PRESSURE RELIEF VALVE	4-4
CYLINDER HEAD ASSEMBLY	8-14	PAIR CONTROL SOLENOID VALVE	5 94
CYLINDER HEAD INSPECTION	8-14	PGM-FI (Programmed Fuel Injection) SYSTEM	5-8
CYLINDER HEAD INSTALLATION	8-21	PGM-FI SELF-DIAGNOSIS MALFUNCTION	5-12
CYLINDER HEAD REMOVAL	8-11	INDICATOR FAILURE CODES	11-4
DELAY VALVE	15 28	PISTON/CONNECTING ROD	15-28
DIODE	18-11	PROPORTIONAL CONTROL VALVE	6-8
DRIVE CHAIN	3-22	RADIATOR	3-20
ECT SENSOR	5-88	RADIATOR COOLANT	6-16
ECM (ENGINE CONTROL MODULE)	5 93	RADIATOR RESERVE TANK	15-35
EMISSION CONTROL INFORMATION LABELS	1-54	REAR BRAKE CALIPER	
EMISSION CONTROL SYSTEMS	1-50		
ENGINE IDLE SPEED	3-20		
ENGINE INSTALLATION	7-6		