

REAR FENDER	2-15	THERMOSTAT	6-5
REAR MASTER CYLINDER	15-23	THROTTLE BODY	5-68
REAR WHEEL	14-3	THROTTLE OPERATION	3-5
REGULATOR/RECTIFIER	16-10	TORQUE VALUES	1-13
RIGHT CRANKCASE COVER INSTALLATION	9-27	TOOLS	1-18
RIGHT CRANKCASE COVER REMOVAL	9-12	TP SENSOR	5-90
SEAT	2-2	TRANSMISSION	12-9
SEAT COWL	2-2	TROUBLESHOOTING	
SEAT RAIL	2-20	(ALTERNATOR/STARTER CLUTCH)	10-1
SERVICE RULES	1-2	(BATTERY/CHARGING SYSTEM)	16-4
SECONDARY AIR SUPPLY SYSTEM	3-21	(CLUTCH/GEARSHIFT LINKAGE)	9-3
SECONDARY MASTER CYLINDER	15-20	(COOLING SYSTEM)	6-2
SERVICE INFORMATION		(CRANKCASE/PISTON/CYLINDER)	11-2
(ALTERNATOR/STARTER CLUTCH)	10-1	(CRANKSHAFT/TRANSMISSION)	12-2
(BATTERY/CHARGING SYSTEM)	16-2	(CYLINDER HEAD/VALVES)	8-3
(CLUTCH/GEARSHIFT LINKAGE)	9-1	(ELECTRIC STARTER)	18-2
(COOLING SYSTEM)	6-1	(ENGINE DOES NOT START OR IS HARD TO START)	22-1
(CRANKCASE/PISTON/CYLINDER)	11-1	(ENGINE LACKS POWER)	22-2
(CRANKSHAFT/TRANSMISSION)	12-1	(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1
(CYLINDER HEAD/VALVES)	8-1	(FRONT WHEEL/SUSPENSION/STEERING)	13-2
(ELECTRIC STARTER)	18-1	(FUEL SYSTEM)	5-3
(ENGINE REMOVAL/INSTALLATION)	7-1	(HYDRAULIC BRAKE)	15-4
(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1	(IGNITION SYSTEM)	17-3
(FRONT WHEEL/SUSPENSION/STEERING)	13-1	(LIGHTS/METERS/SWITCHES)	19-3
(FUEL SYSTEM)	5-1	(LUBRICATION SYSTEM)	4-2
(HYDRAULIC BRAKE)	15-2	(POOR HANDLING)	22-4
(IGNITION SYSTEM)	17-1	(POOR PERFORMANCE AT HIGH SPEED)	22-4
(LIGHTS/METERS/SWITCHES)	19-1	(POOR PERFORMANCE AT LOW AND IDLE SPEED)	22-3
(LUBRICATION SYSTEM)	4-1	(REAR WHEEL/SUSPENSION)	14-2
(MAINTENANCE)	3-1	TURN SIGNAL	19-7
(REAR WHEEL/SUSPENSION)	14-1	TURN SIGNAL RELAY	19-34
SHOCK ABSORBER	14-9	UPPER COWL	2-8
SIDE STAND	3-31	UPPER COWL COVER/INNER PANEL	2-5
SIDE STAND SWITCH	19-33	VALVE CLEARANCE	3-12
SPARK PLUG	3-8	VALVE GUIDE REPLACEMENT	8-16
SPECIFICATIONS	1-4	VALVE SEAT INSPECTION/REFACING	8-17
SPEEDOMETER/VEHICLE SPEED SENSOR	19-15	WATER PUMP	6-13
STARTER CLUTCH	10-5	WHEELS/TIRES	3-33
STARTER MOTOR	18-4	WIND GUARD/RAM DUCT	2-14
STARTER RELAY SWITCH	18-10	WIRING DIAGRAM	20-1
STARTER VALVE	5-79		
STARTER VALVE SYNCHRONIZATION	5-83		
STATOR	10-2		
STEERING HEAD BEARINGS	3-33		
STEERING STEM	13-27		
SUSPENSION	3-31		
SUSPENSION LINKAGE	14-11		
SWINGARM	14-12		
SYSTEM DIAGRAM			
(BATTERY/CHARGING SYSTEM)	16-0		
(ELECTRIC STARTER)	18-0		
(FUEL SYSTEM: '99)	5-5		
(FUEL SYSTEM: After '99)	5-7		
(IGNITION SYSTEM)	17-0		
SYSTEM LOCATION			
(FUEL SYSTEM)	5-4		
(FUEL SYSTEM: After '99)	5-6		
(LIGHTS/METERS/SWITCHES)	19-0		
SYSTEM FLOW PATTERN	6-0		
SYSTEM TESTING	6-3		
TACHOMETER	19-18		
TAIL/BRAKE LIGHT	19-10		