

SUSPENSION

FRONT SUSPENSION INSPECTION

Check the action of the forks by operating the front brakes and compressing the front suspension several times.

Check the entire assembly for signs of leaks, damage or loose fasteners.

Replace damaged components which cannot be repaired.


Tighten all nuts and bolts.

Refer to fork service (page 14-21).



Check for worn steering stem bearings by grabbing the front fork legs and attempting to move the front fork front to back.

Replace the bearings if any looseness is noted.

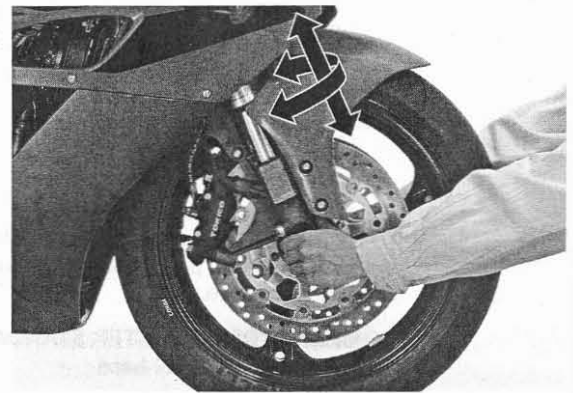

FRONT SUSPENSION ADJUSTMENT

SPRING PRE-LOAD ADJUSTER

Spring pre-load can be adjusted by turning the adjuster.

TURN CLOCKWISE:

Increase the spring pre-load

TURN COUNTERCLOCKWISE:

Decrease the spring pre-load

PRE-LOAD ADJUSTER ADJUSTABLE RANGE:

15 turns

PRE-LOAD ADJUSTER STANDARD POSITION:

7 turns in from minimum

