


Drive Chain

Drive chain adjustment:

Check the drive chain for wear and tension. If it appears dry, apply a lubricant.

1. Place the motorcycle on the center stand. Move the chain (1) up and down with your fingers at a point midway between the sprockets. Adjust slack so that it is approx. 20 mm (3/4 in.).
2. To adjust, remove the rear axle nut cotter pin (2) and loosen the rear axle nut (3). Then loosen the lock nuts (4) and turn the adjusting bolts (5) as necessary.

Make sure the chain adjusters on both sides are at the same index mark (6) locations.

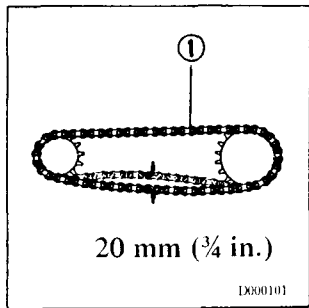

Cadena de transmisión

Ajuste de la cadena de transmisión

Verifique la tensión de la cadena de transmisión mensualmente; también por dureza de operación debido a lubricación inadecuada.

1. Apoye la moto en el soporte central. Mueva la cadena (1) hacia arriba y hacia abajo, con los dedos, a un punto medio entre los piñones dentados. Ajuste el juego de modo que sea aproximadamente de 20 mm.
2. Para ajustar, quite el pasador hendido (2) de la tuerca del eje trasero y afloje la tuerca del eje trasero (3). Luego, afloje las tuercas fijadoras (4) y gire los pernos de ajuste (5) cuanto sea necesario. Asegúrese de que los ajustadores de cadenas de ambos lados estén en las mismas marcas de índice (6).

