


### Air pressure

Check and adjust air pressure when the front fork tubes are cold before riding.

1. Place the motorcycle on its center stand  
Do not use the side stand, or you will get false pressure readings.  
Raise the front wheel off the ground by using a jack under the engine.
2. Remove the front fork air valve caps (1). Check the air pressure.  
**NOTE: Some pressure will be lost when removing the gauge from the valve. Determine the amount of loss and compensate accordingly.**

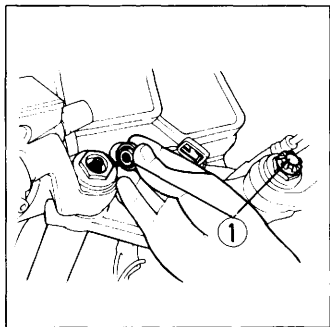

### Pression

Vérifier la pression avant de prendre la route lorsque les tubes plongeurs de fourche avant sont froids.

1. Placer la machine sur sa béquille centrale.  
Ne pas utiliser la béquille latérale car l'on obtiendrait de fausses indications. Décoller la roue avant du sol à l'aide d'un cric placé sous le moteur.
2. Enlever le capuchon de valve d'air de fourche avant (1). Vérifier la pression.

**NOTE: De l'air s'échappera lorsqu'on enlève le manomètre de la valve. Déterminer la quantité d'air qui s'est échappée et compenser en conséquence.**