


Air Cleaner

1. Remove the left side cover (1) by loosening the screw.
2. Remove the air cleaner case cover (2) loosening the screws.
3. Loosen the wing nut (3) and remove the element (4).
4. Wash the cleaner element (4) in clean solvent and allow to dry thoroughly.
5. Soak the air cleaner element in clean gear oil (SAE80-SAE90) until saturated, then squeeze out excess oil.
6. Replece the air cleaner and side cover.

WARNING: Gasoline or low flash point solvents are highly flammable and must not be used to clean the element.

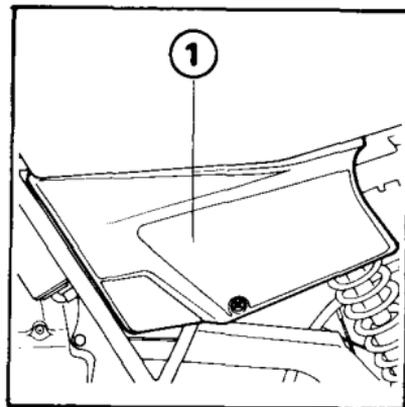

Filtro de aire

1. Quite la cubierta del lado izquierdo (1) aflojando el tornillo.
2. Quite la cubierta del caja de limpiador de aire (2) aflojando los tornillos.
3. Afloje la tuerca de oreja (3) y quite el elemento (4).
4. Lave el elemento del filtro (4) en un solvente limpio y déjela secar completamente.
5. Ponga a remojar el elemento del filtro de aire en el aceite de engranaje (SAE80-SAE90) limpio hasta que sature. Luego, sáquele para purgar el exceso del aceite.
6. Remonte el filtro de aire y la cubierta lateral.

PRECAUCION: La gasolina y otros solventes de bajo punto de ignición son extremadamente inflamables y no deben utilizarse para lavar el elemento.

