

SPARK ARRESTER

The exhaust system must be periodically purged of accumulated carbon. To purge the system:

1. Select a well-ventilated area and make sure the exhaust pipe is cool.
2. Remove the bolt (Fig. 4-38).
3. Start the engine and rev it up approximately twenty times while momentarily creating exhaust system back pressure by blocking the end of the muffler with a shop towel.
4. Stop the engine and allow the exhaust pipe to cool.
5. Reinstall the bolt securely.

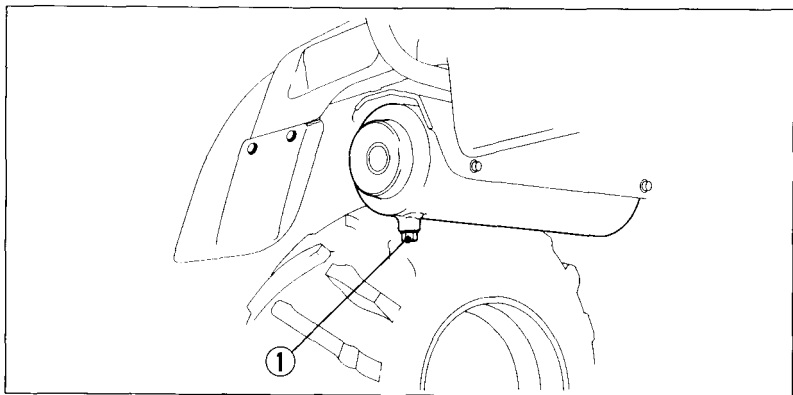


Fig. 4-38
(1) Bolt