

## FRONT FENDER

### REMOVAL/INSTALLATION

Remove the front brake hose 3-way joint bolt and hose clamp nut.

Remove the pan screws, front fender, reflectors and grommets from the fork legs.

Install the front fender in the reverse order of removal.

#### TORQUE:

Front fender pan screw:


12 N·m (1.2 kgf·m, 9 lbf·ft)

Front brake hose clamp nut:

9.8 N·m (1.0 kgf·m, 7 lbf·ft)

Front brake hose 3-way joint bolt:

9.8 N·m (1.0 kgf·m, 7 lbf·ft)

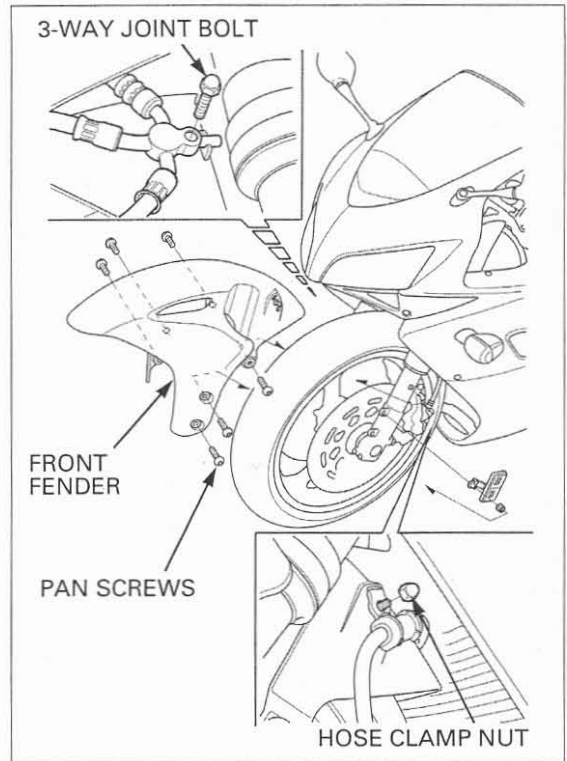

## REAR FENDER

### REAR FENDER A REMOVAL

Remove the rear cowl (page 3-5).

Disconnect the turn signal and license light connectors.

Remove the rear fender A mounting bolts, washers and rear fender A assembly.

