



Make sure that the switch end plate is installed into the handlebar switch groove.

Install the left handlebar switch, aligning its locating pin with the hole in the handlebar.

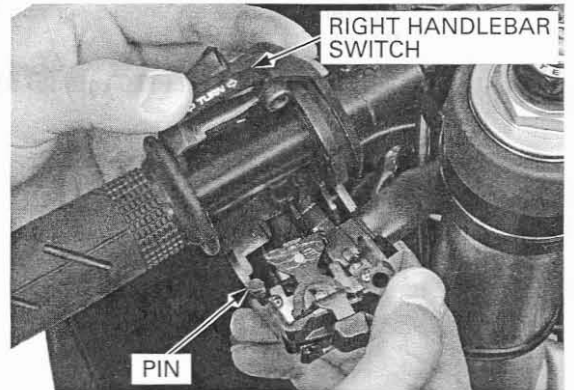


Tighten the forward screw first, then the rear screw.

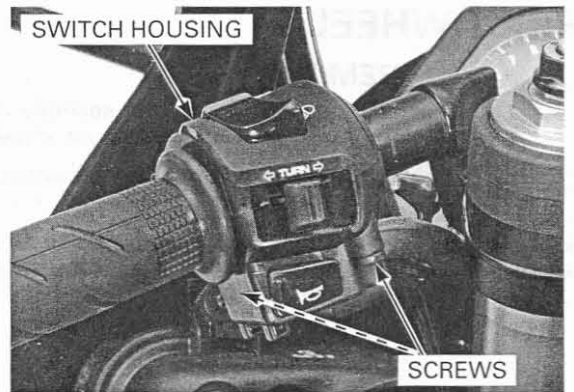

Install the clutch master cylinder and holder with the "UP" mark facing up. Align the end of the master cylinder with the punch mark on the handlebar, and tighten the upper bolt first, then lower bolt.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the clutch switch connectors.

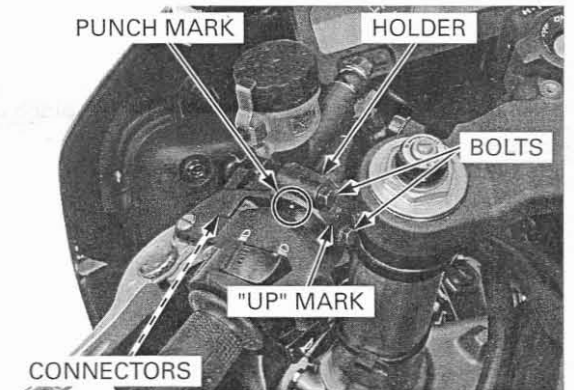

Install the washer and handlebar weight on both handlebars, aligning with each handlebar and handlebar weight cutout.

