


## HYDRAULIC BRAKE

Install the brake pad retainer onto the caliper bracket.


*Note the installation direction of the pad spring.*  
Install the pad spring into the caliper body.

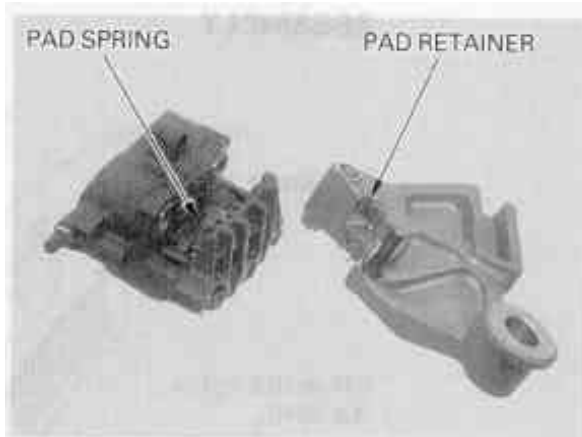

Apply silicone grease to the boot inside then install them.

Assemble the caliper and bracket.

Install the rear brake pads (page 15-14).

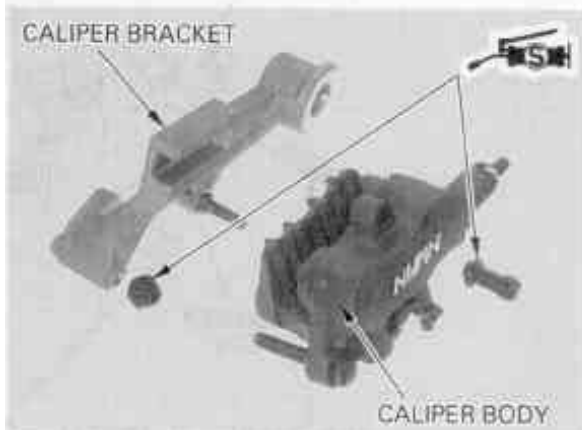

### INSTALLATION

Temporarily install the brake hose eyelets to the caliper body with new sealing washers and oil bolts.

Install the caliper/bracket assembly onto the swingarm aligning the bracket groove with the swingarm boss.



Install the rear wheel (page 14-8).

Push the brake hose eyelets to the stopper on the caliper, then tighten the oil bolts to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

Fill and bleed the pedal brake line hydraulic system (page 15-8).

