



Clamp the main wire harness to the wire clamp.

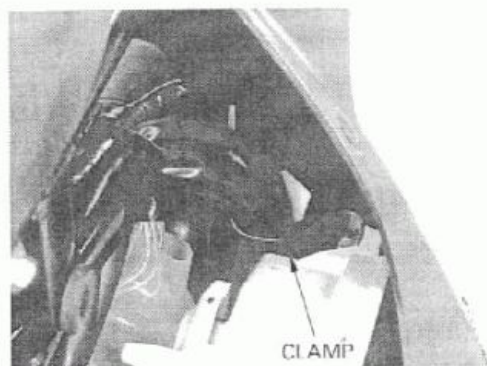


Install the two trim clips.

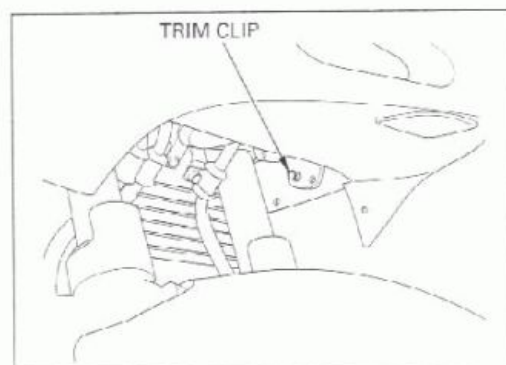

Route the turn signal wires.  
Set the rubber cushion and mirror plate onto the rearview mirror pivot.

**NOTE:**

Install the rubber cushion and mirror plate with their "← FR" marks facing forward.

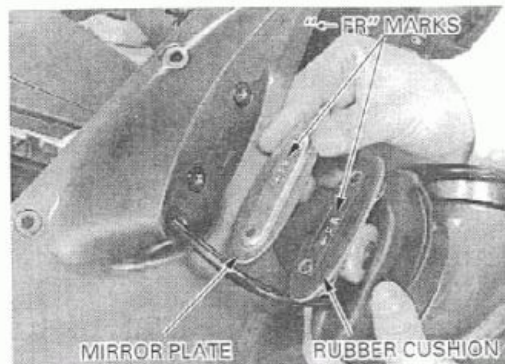

Install the washers and socket bolts, but do not tighten them yet.

