


Install the right passenger footpeg holder onto the seat rail, tighten the mounting bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m , 20 lbf·ft)

Install and tighten the PCV (Proportional Control Valve) mounting bolts.

Install and tighten the rear brake hose clamp bolt.

Install the removed parts in the reverse order of removal.

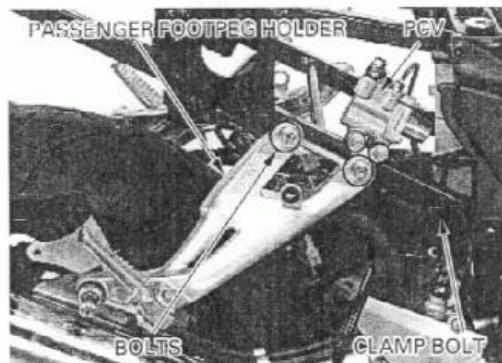

MUFFLER/EXHAUST PIPE

REMOVAL

▲WARNING

Do not service the exhaust system while it is hot.


Remove the lower cowl (page 2-3).

Loosen the exhaust pipe/muffler clamp bolts.



Remove the following:

- Exhaust pipe mounting nut
- Footpeg holder mounting bolts and footpeg
- Muffler mounting bolt/nut/collar
- Muffler
- Muffler gasket

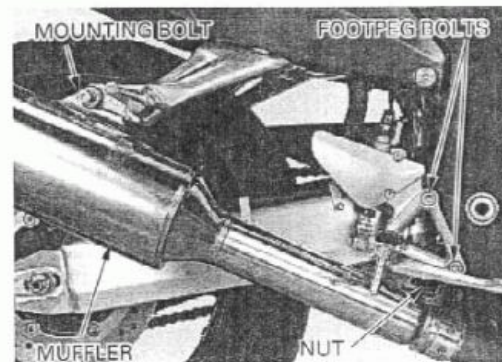

Remove the following:

- Upper cowl cover/inner panel (page 2-5)
- Wind guard (page 2-14)

Remove the oil cooler upper mounting bolts and main wire harness guide.

