




Route the throttle body sub-harness referring the wiring diagram (page 1-24).
Connect the fuel injectors and MAP sensor connectors.

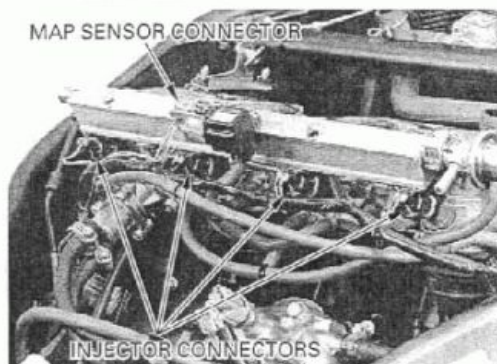

Connect the TP (throttle position) sensor connector and No. 1/3 ignition coil primary wires.

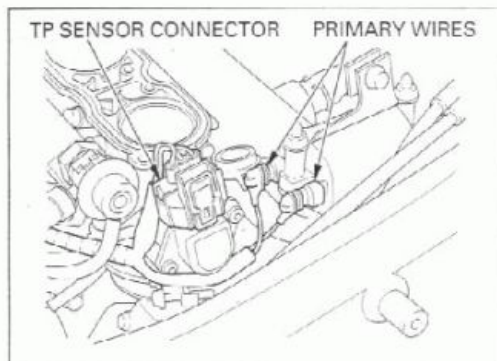

California type only: Connect the EVAP purge control solenoid valve hose to the throttle body vacuum hose 5-way joint.

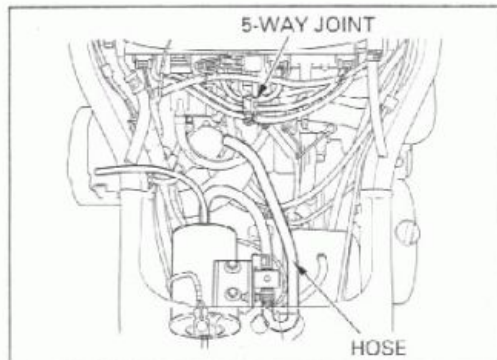

Install the throttle cable guide bracket to the throttle body, then tighten the bolts to the specified torque.

TORQUE: 3 N·m (0.35 kgf·m, 2.5 lbf·ft)

Install the throttle stop screw into the guide.

Install the removed parts in the reverse order of removal.

