



Install the spacer into the handlebar switch groove. Install the left handlebar switch aligning its locating pin with the hole in the handlebar.

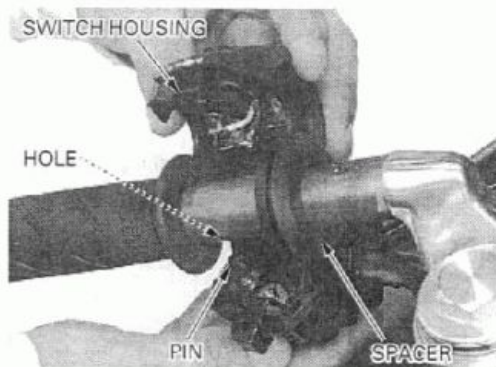

Tighten the forward screw first, then the rear screw.

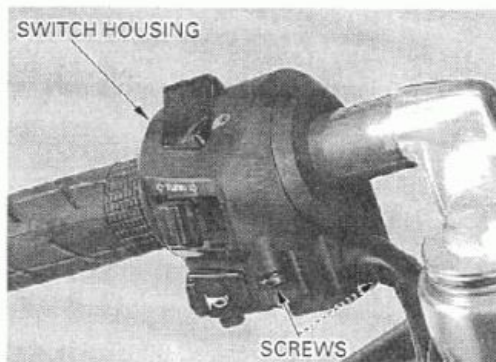


Install the clutch master cylinder assembly by aligning the end of the master cylinder with the punch mark on the handlebar. Install the clutch master cylinder holder with the "UP" mark facing up.

Tighten the upper bolt first, then the lower bolt.

**TORQUE:** 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the clutch switch wires.

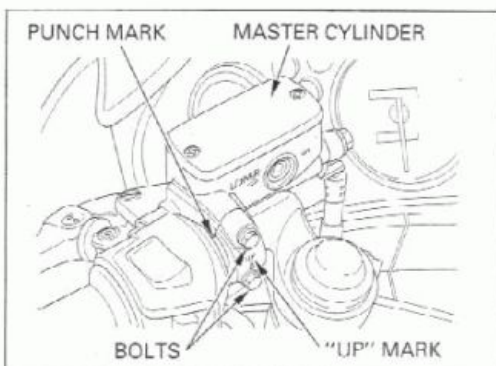

## RIGHT HANDLEBAR INSTALLATION

Install the right handlebar onto the fork pipe while aligning its boss with the groove of the top bridge. Make sure the handlebar is seated on the top bridge.

