



Rear master cylinder to front brake caliper lines:

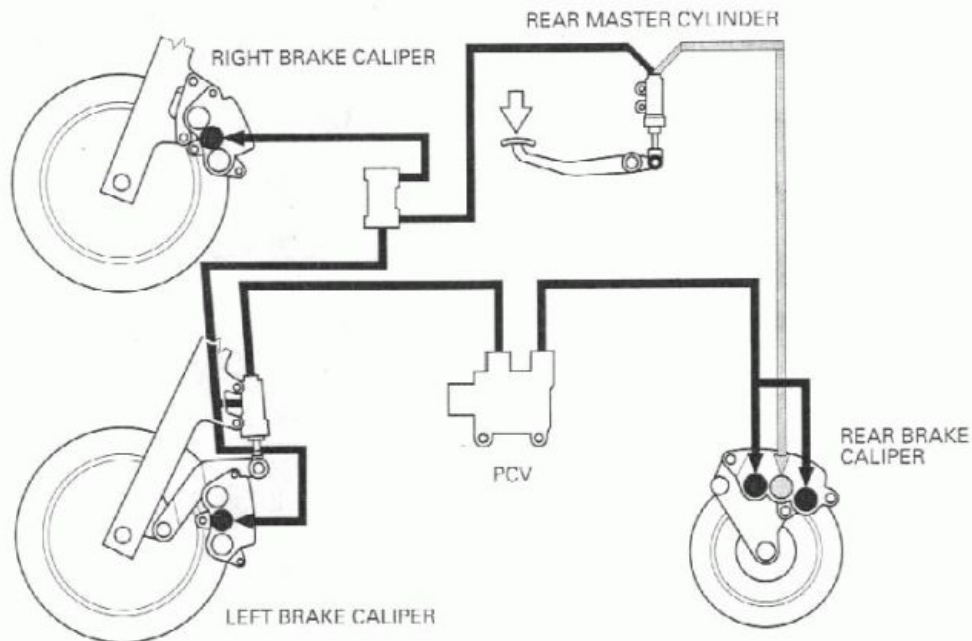

*When using a brake bleeder, follow the manufacturer's operating instructions.*

1. Connect a commercially available brake bleeder to the right front brake caliper center bleed valve. Pump the brake bleeder and loosen the bleed valve. Operate the brake bleeder and feed the brake fluid until fluid flow out from the bleeder valve. Close the bleeder valve.

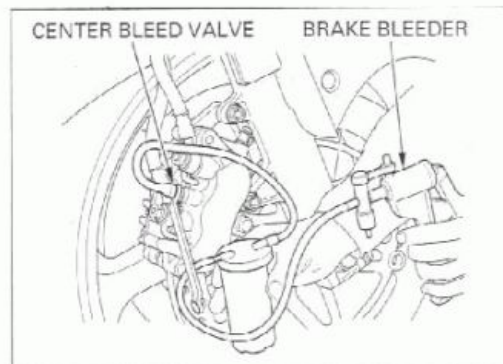

2. Feed the brake fluid at the left front brake caliper center bleeder valve as same procedure in step 1.

