


Install the brake hose eyelet with the oil bolt and new sealing washers.
Tighten the oil bolts to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m , 25 lbf·ft)

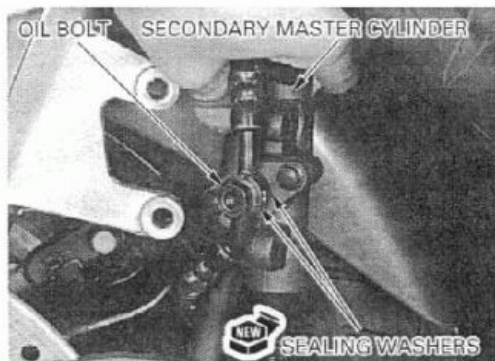


Place the secondary master cylinder and reflector onto the fork leg, then tighten the new mounting bolts.

TORQUE: 31 N·m (3.2 kgf·m , 23 lbf·ft)

Install the brake hose with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.


TORQUE: 34 N·m (3.5 kgf·m , 25 lbf·ft)

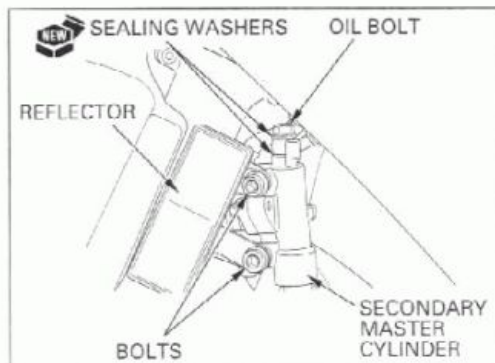

Install and tighten the new left front brake caliper joint bolt to the specified torque.

TORQUE: 25 N·m (2.6 kgf·m , 19 lbf·ft)

Bleed the air from pedal brake line (page 15-7).

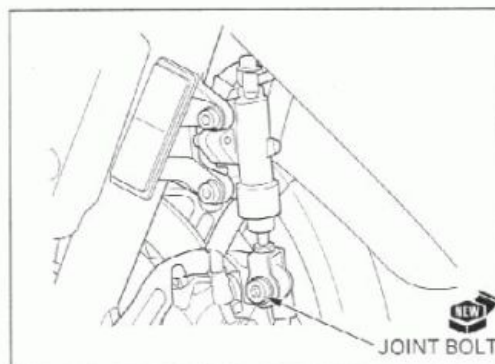

REAR MASTER CYLINDER

REMOVAL

Drain the pedal brake hydraulic system (page 15-5).

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joints.

CAUTION:

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

Loosen the rear master cylinder mounting bolts.

