


INSTALLATION


Install the delay valve onto the right fork slide while installing the brake pipe into the delay valve. Install the reflector and tighten the delay valve mounting bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

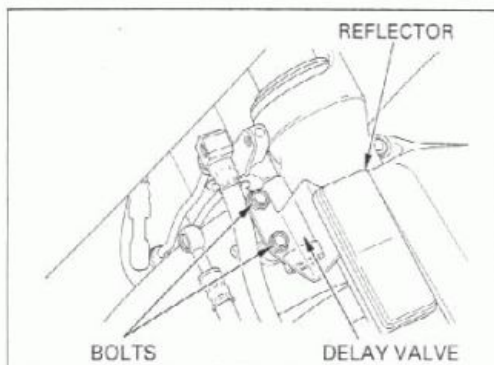

Tighten the brake pipe joint nut to the specified torque.

TORQUE: 17 N·m (1.7 kgf·m , 12 lbf·ft)

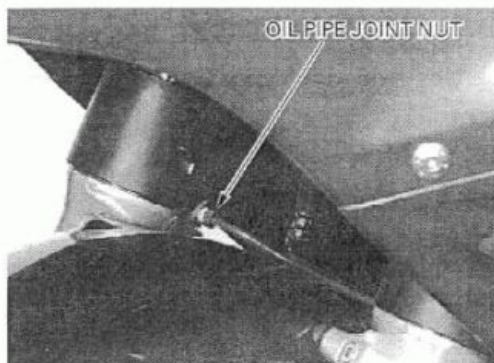


Install the 3 way joint and tighten the bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

Install the brake hose with the oil bolt and new sealing washers. Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m , 25 lbf·ft)

Fill the reservoir to the upper level and bleed the pedal brake line (page 15-8).

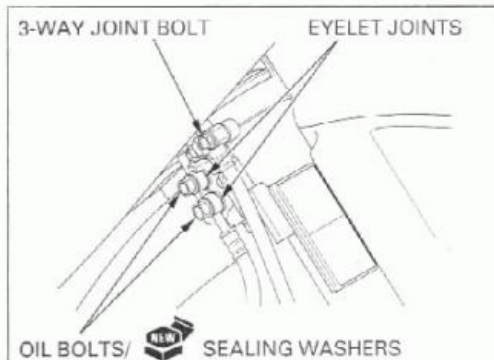

FRONT BRAKE CALIPER

LEFT CALIPER REMOVAL

CAUTION:

Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

Drain the lever and pedal brake line hydraulic system (page 15-5).

Remove the oil bolts, sealing washers and brake hose eyelet joints.

Remove the secondary master cylinder joint bolt and caliper pivot bolt, then remove the caliper/bracket as an assembly.

