


Support both ends of the camshaft with V-blocks and check the camshaft runout with a dial indicator.

SERVICE LIMIT: 0.02 mm (0.001 in)

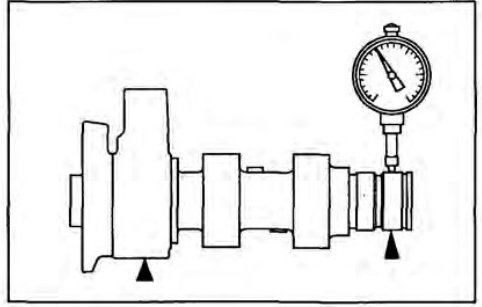

Valve lifter

Check the valve lifter bore for scoring, scratches or damage.

Measure the each valve lifter bore I.D.

SERVICE LIMIT: 22.5 mm (0.89 in)



Check the valve lifter for scoring, scratches or damage.

Measure the each valve lifter O.D.

SERVICE LIMIT: 22.47 mm (0.885 in)



Valve spring

Measure the valve spring length.

SERVICE LIMIT: 38.5 mm (1.52 in)

