


THROTTLE OPERATION

Refer to the Safety Precautions on page 60 .

1. Check for smooth rotation of the throttle grip from the fully open to the fully closed position at all steering positions.
2. Measure the throttle grip free play at the throttle grip flange. The standard free play should be approx:
2-6 mm (0.08-0.24 in)

To adjust play, loosen the lock nut (1) and turn the adjuster (2).

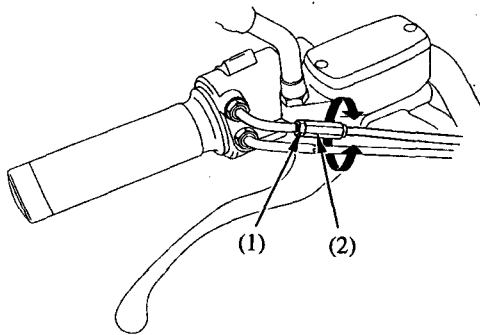

(1) Lock nut

(2) Adjuster