


5. Tighten the front brake cable guide bolt.
6. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.
7. Check the freeplay. If you cannot adjust the freeplay properly, see your dealer.

After adjustment, push the brake arm (8) to confirm that there is proper freeplay.

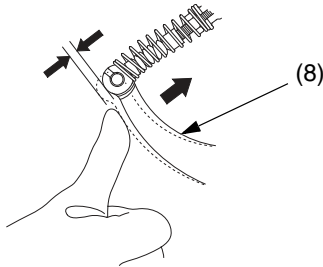


(8) brake arm

After adjustment, confirm the freeplay of the brake lever.

## Rear Brake Pedal Freeplay

RIGHT SIDE

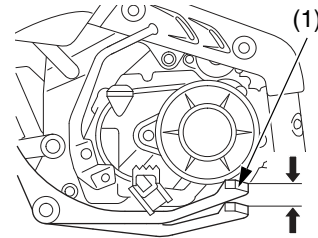

(1) rear brake pedal

### Inspection

1. Place your motorcycle on its side stand.
2. Check freeplay by slowly depressing the brake pedal (1) until the brake starts to engage.  
Freeplay:  $\frac{3}{8}$ – $\frac{13}{16}$  in (10–20 mm)

If necessary, adjust to the specified range.

(cont'd)