


FRAME/BODY PANELS/EXHAUST SYSTEM


First tighten the exhaust pipe joint nuts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

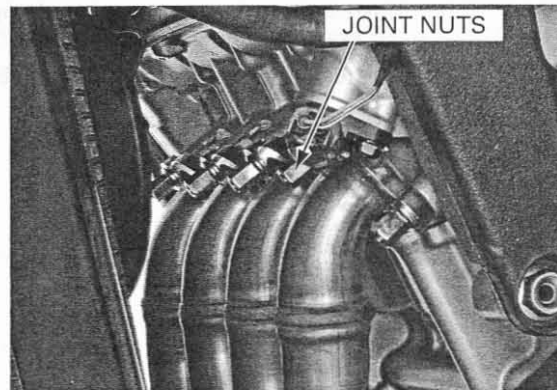


Tighten the exhaust pipe mounting bolt/washer.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

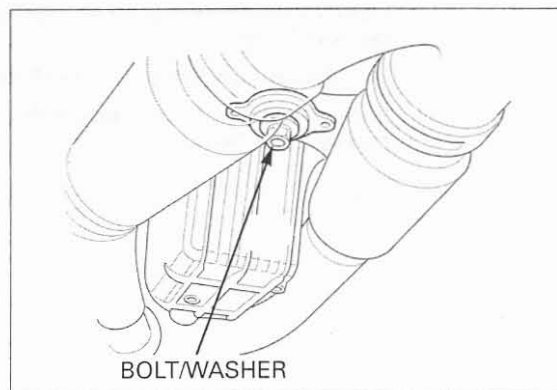

Tighten the exhaust pipe clamp SH bolt to the specified torque.

TORQUE: 9.8 N·m (1.0 kgf·m, 7 lbf·ft)

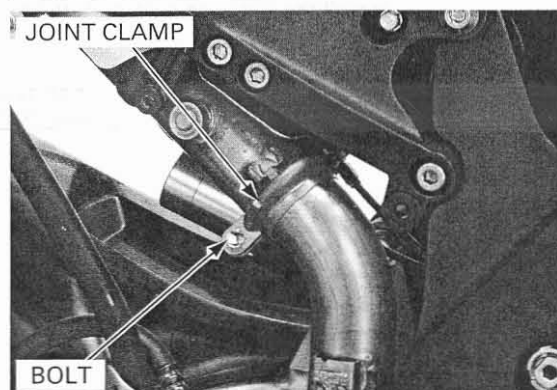

Tighten the muffler band flange bolt to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

