



PGM-FI WARNING INDICATOR 21 BLINK (O₂ SENSOR: AFTER '99 CALIFORNIA TYPE ONLY)

Turn the ignition switch to "OFF".

Disconnect the O₂ sensor connector.
Check for loose or poor contact on the O₂ sensor connector.

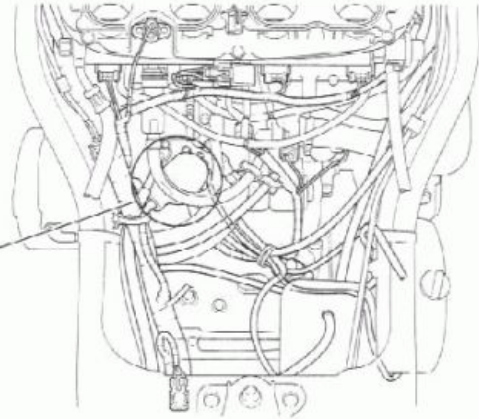


Disconnect the ECM connectors.
Connect the test harness to ECM connectors.

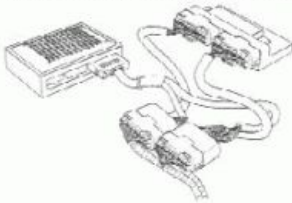

Check the continuity between the test pin box terminal and O₂ sensor connector terminal.

No.35

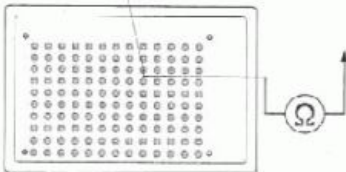

Connection: White/orange - No. 35
Standard: Continuity

No continuity → • Open circuit in O₂ sensor White/orange wire.

Continuity

Check the continuity between the O₂ sensor connector terminal and ground.



Connection: Green/orange - Ground
Standard: No continuity

Continuity → • Short circuit in O₂ sensor Green/orange wire.

No continuity