



Remove the shock absorber lower mounting bolt/nut.  
Remove the shock arm plate bolt/nut (swingarm side).

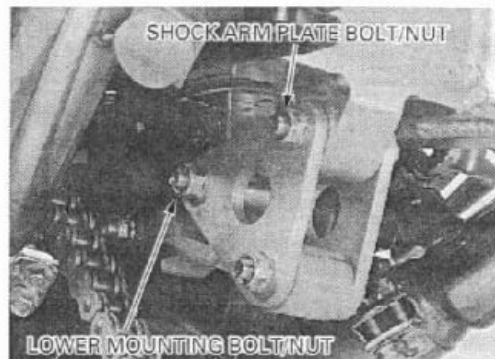


Remove the swingarm pivot nut.

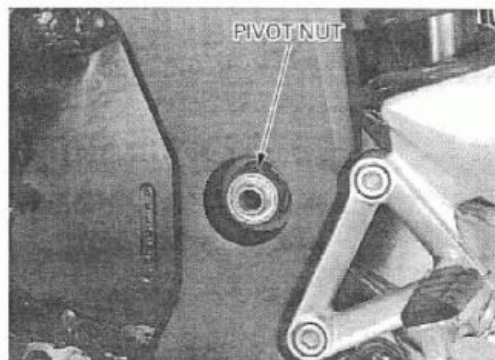

Remove the swingarm pivot lock nut while holding the pivot bolt.

**TOOL:**

**Pivot adjusting wrench**                      07908-4690003

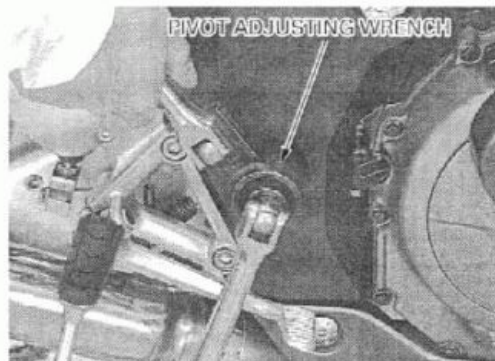

Loosen the swingarm adjusting bolt by turning the pivot bolt.  
Remove the pivot bolt and swingarm.

