



## REAR WHEEL/SUSPENSION

Apply grease to the dust seal lips, then install the dust seals and pivot collar into the shock link pivot.

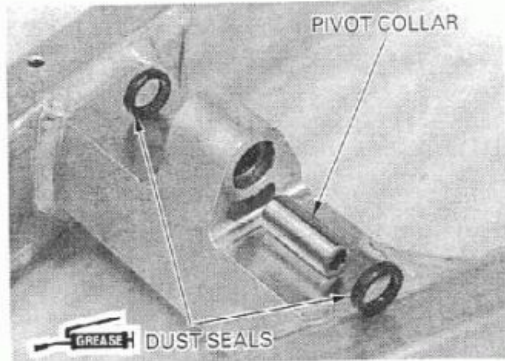

Apply grease to the dust seal lips, then install the dust seals and pivot collar B into the swingarm pivot.

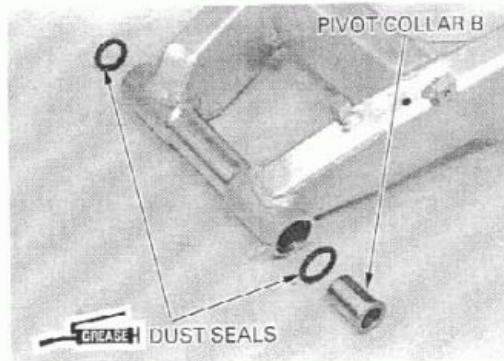

Install the drive chain slider aligning its tabs with the holes in the swingarm.



Apply a locking agent to the drive chain slider bolt threads. Install the collars and bolts, then tighten the bolts to the specified torque.

**TORQUE:** 9 N·m (0.9 kgf·m , 6.5 lbf·ft)

Install the drive chain adjusters.

