Apply a locking agent to the fork socket bolt threads.
Install the socket bolt with a new sealing washer.

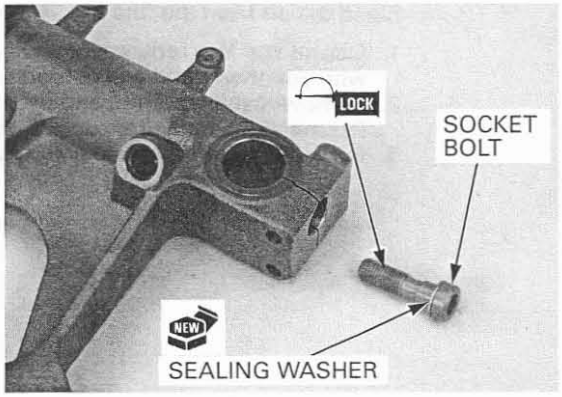

Hold the axle holder in a vise with soft jaws or a shop towel.
Hold the fork damper with the fork damper holder, then tighten the fork socket bolt to the specified torque.

TOOL:
Fork damper holder — **07YMB-MCF0101 or 07YMB-MCFA100 (U.S.A. only)**

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

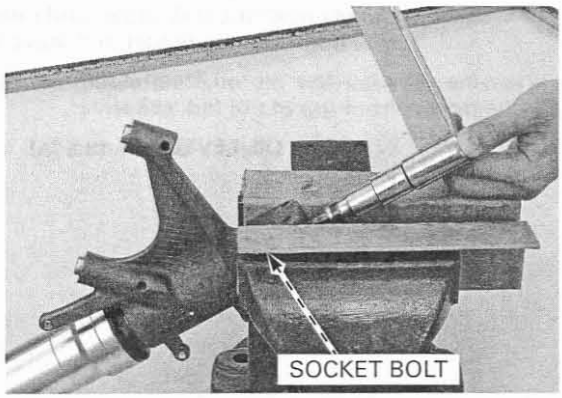

Apply fork fluid to new O-ring and install it to the compression adjuster.
Install the compression adjuster to the axle holder.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

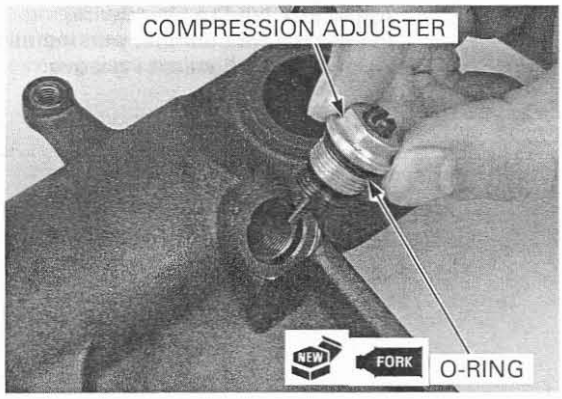

Pour the specified amount of recommended fork fluid into the fork leg.
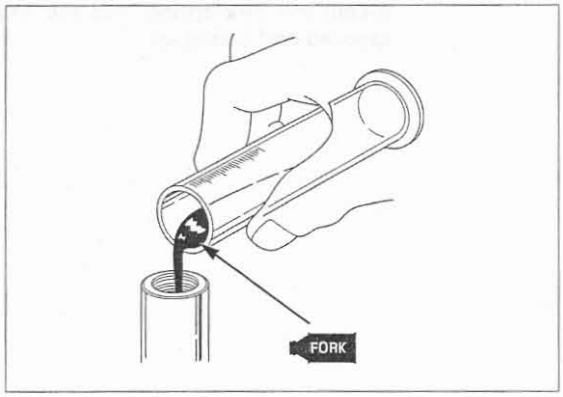
RECOMMENDED FORK FLUID:
Pro Honda Suspension Fluid, SS-55 or equivalent
FORK FLUID CAPACITY:
466 ± 2.5 cm³ (15.8 ± 0.08 US oz, 16.4 ± 0.09 Imp oz)