


## FRONT WHEEL/SUSPENSION/STEERING

Bleed the air from the fork leg as follows:

1. Extend the fork, cover the top of the fork slider with your hand and compress the fork leg slowly.
2. Remove your hand and extend the fork slowly. Repeat above procedure 2 or 3 times.
3. Pump the fork damper rod slowly 8 – 10 times.

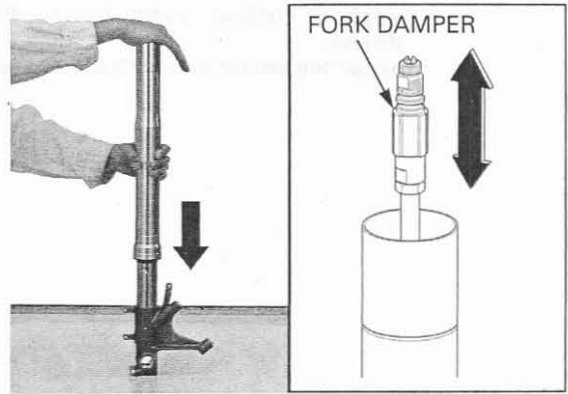


Slowly push the fork slider, and gently seat the dust seal onto the axle holder and leave it for 5 minutes.

*Be sure the oil level is the same in the both forks.*

After the oil level stabilizes, measure the oil level from top of the fork slider.

**FORK OIL LEVEL: 90 mm (3.5 in)**

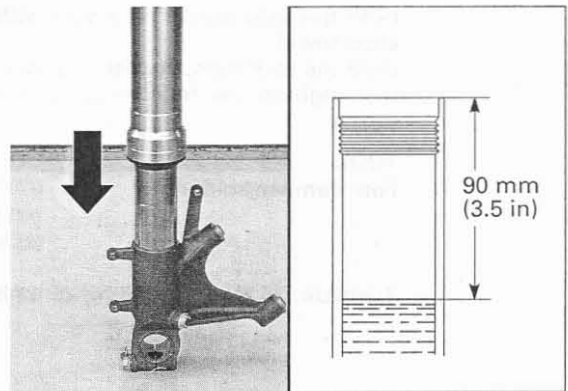

Apply fork fluid to new O-ring. Extend the fork damper and install the O-ring to the damper rod adjust case groove.



Install the fork spring into the fork slider with the tapered end facing up.

